



## REAR DOOR LATCH SWITCH INSPECTION

B3E091458490W09

1. When inspecting the latch, press the latch lever using a flathead screwdriver or a similar tool.

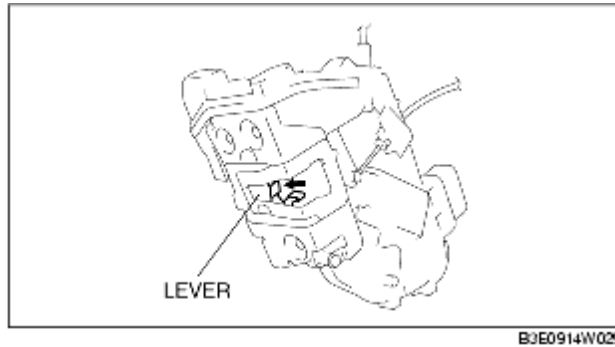

2. Inspect for continuity between the rear door latch switch terminals.

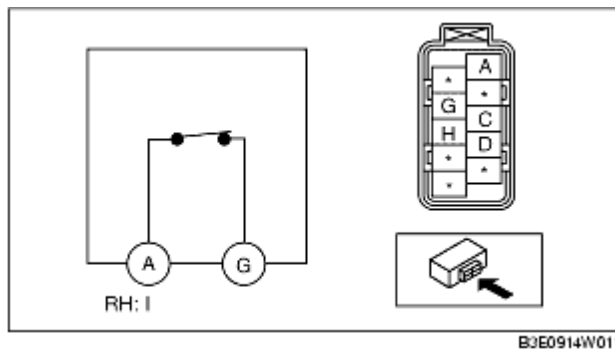

- If not as specified, replace the rear door latch and lock actuator.

Latch condition	Terminal	
	LH: A RH: I	G
Latch (door is closed)	○ — ○ : Continuity	
Unlatch (door is open)		

B3E0914W012