


DOOR LOCK-LINK SWITCH INSPECTION

B3E091458490W10

1. Inspect for continuity between the door lock-link switch terminals.

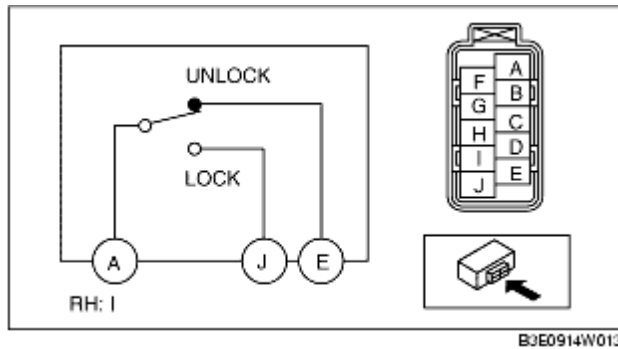

- If not as specified, replace the front door latch and lock actuator.

○—○ : Continuity

Lock knob position	Terminal		
	E	LH: A RH: I	J
Lock		○—○	○—○
Unlock	○—○	○—○	

B3E0914W014