


FRONT DOOR KEY CYLINDER SWITCH INSPECTION

B3E091458490W11

1. Inspect for continuity between the front door key cylinder switch terminals.

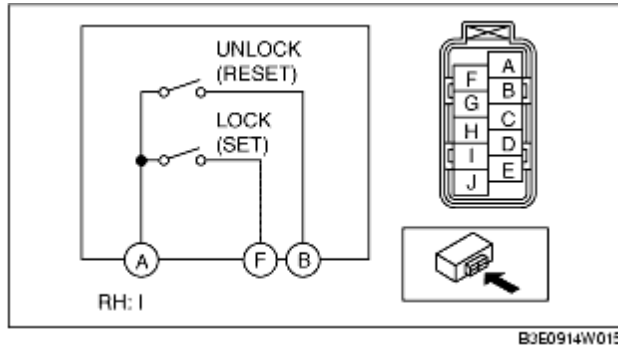

- If not as specified, replace the front door latch and lock actuator.

Key cylinder position	Terminal		
	B	LH: A RH: I	F
Lock (Set)		○ — ○	○
Unlock (Reset)	○ — ○	○	
Neutral			

○ — ○ : Continuity

B3E0914W016