


DOOR LOCK STRIKER REMOVAL/INSTALLATION

B3E091458490W12

1. Remove the screws, then remove the door lock striker.

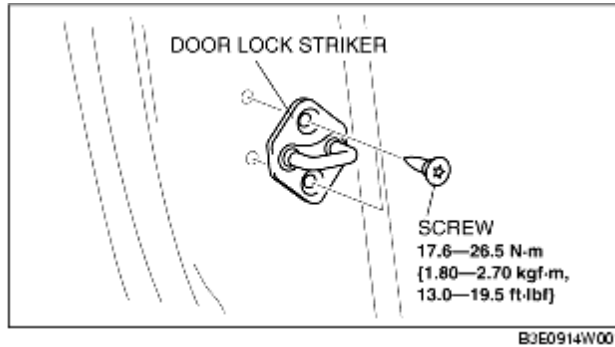

2. Install in the reverse order of removal.
3. Adjust the door. (See [DOOR ADJUSTMENT](#).)