



# FRONT OUTER HANDLE REMOVAL/INSTALLATION

B3E091459320W01

1. Disconnect the negative battery cable. (vehicles with power window system or power outer mirror)
2. Fully roll up the front door glass.
3. Remove the following parts:
  - (1) Inner garnish (See [INNER GARNISH REMOVAL/INSTALLATION.](#))
  - (2) Regulator handle (vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL.](#)) (See [REGULATOR HANDLE INSTALLATION.](#))
  - (3) Front door trim (See [FRONT DOOR TRIM REMOVAL/INSTALLATION.](#))
  - (4) Front door key cylinder (See [FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.](#))
4. Detach the rod from the outer handle.
5. Remove the nut, then remove the pad.
6. Remove the bolt.

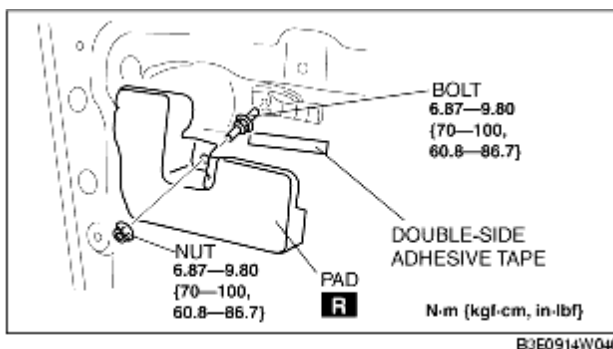

7. Secure the rear part of the front outer handle and, with the front outer handle lever pulled outward (1), remove the rear part of the front outer handle from the front door.

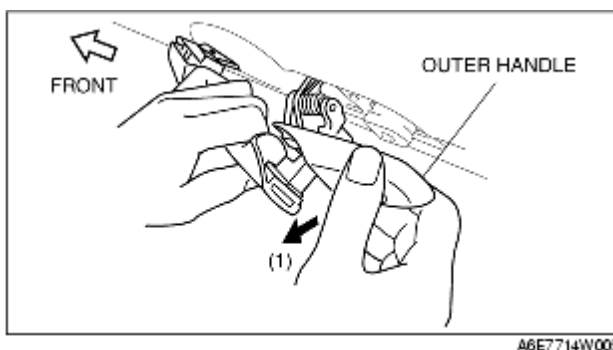

8. Pull out the front side of the front outer handle from the front door.
9. Install in the reverse order of removal.