


# REAR OUTER HANDLE REMOVAL/INSTALLATION


B3E091459320W02

1. Disconnect the negative battery cable. (vehicles with power window system)
2. Fully roll up the rear door glass.
3. Remove the sail garnish. (5HB) (See [SAIL GARNISH REMOVAL/INSTALLATION.](#))
4. Remove the regulator handle. (vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL.](#)) (See [REGULATOR HANDLE INSTALLATION.](#))
5. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/INSTALLATION.](#))
6. Remove the hole cover.
7. Remove the hole plug.

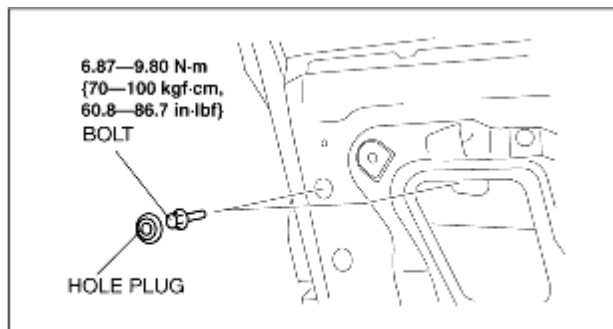

B3E0914W041

8. Remove the bolts.
9. Secure the rear part of the rear outer handle and, with the rear outer handle lever pulled outward (1), remove the rear part of the rear outer handle from the rear door.

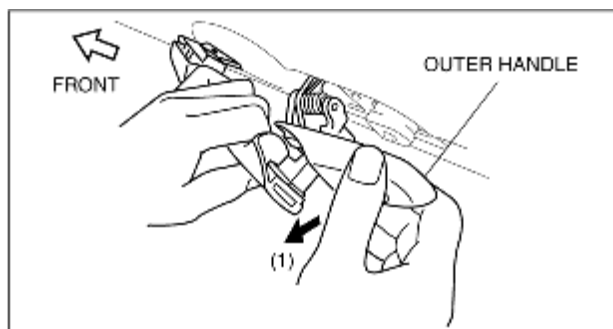

A6E7714W005

10. Install in the reverse order of removal.