


INNER HANDLE REMOVAL/INSTALLATION

B3E091459320W03

1. Disconnect the negative battery cable. (vehicles with power window system or power outer mirror)
2. Remove the inner garnish. (front) (See [INNER GARNISH REMOVAL/INSTALLATION.](#))
3. Remove the regulator handle. (vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL.](#)) (See [REGULATOR HANDLE INSTALLATION.](#))
4. Remove the front door trim or rear door trim. (See [FRONT DOOR TRIM REMOVAL/INSTALLATION.](#)) (See [REAR DOOR TRIM REMOVAL/INSTALLATION.](#))
5. Using a flathead screwdriver, press and hold the tab in the direction indicated by arrow (1), and remove the shaft by pulling it in the direction indicated by arrow (2).

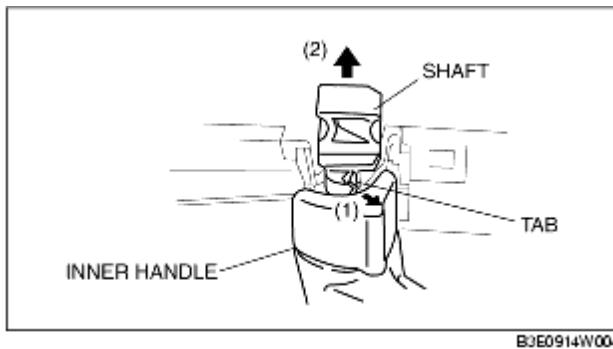

6. Pull off the inner handle, and remove the door lock knob cable and inner handle cable.
7. Install in the reverse order of removal.