



LIFTGATE OUTER HANDLE REMOVAL/INSTALLATION

B3E091462490W01

1. Remove the liftgate upper trim. (See [LIFTGATE UPPER TRIM REMOVAL/INSTALLATION](#).)
2. Remove the liftgate lower trim. (See [LIFTGATE LOWER TRIM REMOVAL/INSTALLATION](#).)
3. Remove the nuts.

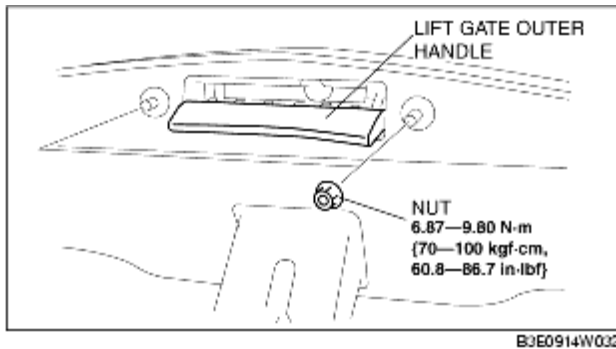

4. Detach the cable.

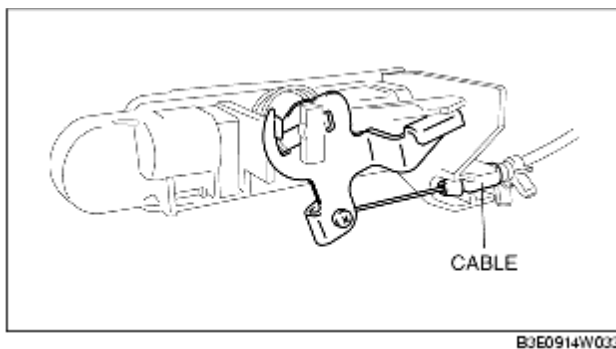

5. Install in the reverse order of removal.