



LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION

B3E091462490W02

1. Disconnect the negative battery cable.
2. Remove the liftgate upper trim. (See [LIFTGATE UPPER TRIM REMOVAL/INSTALLATION](#).)
3. Remove the liftgate lower trim. (See [LIFTGATE LOWER TRIM REMOVAL/INSTALLATION](#).)
4. Disconnect the liftgate lock actuator connector and liftgate latch switch connector.
5. Detach the rod from the liftgate key cylinder.
6. Remove the clips.
7. Remove the bolts.

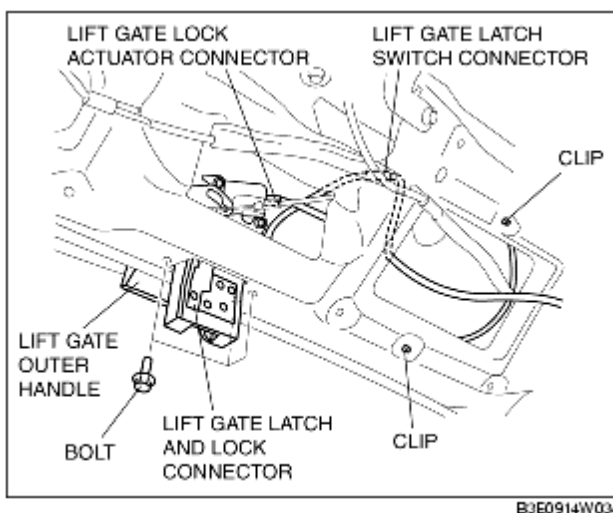

8. Remove the liftgate latch and lock actuator
9. Detach the cable from the liftgate latch and lock actuator.

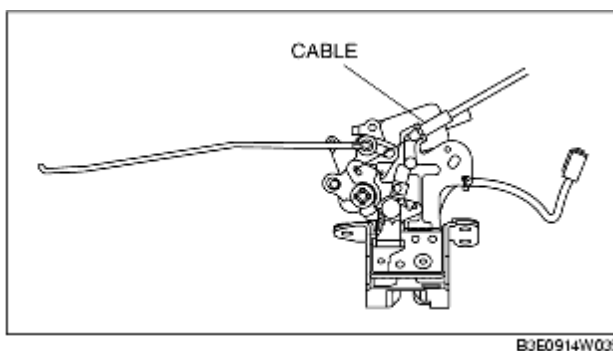

10. Install in the reverse order of removal.