


LIFTGATE LOCK ACTUATOR INSPECTION

B3E091462490W03

1. Apply battery positive voltage and connect ground to the corresponding liftgate lock actuator terminals, and inspect the liftgate lock actuator operation.

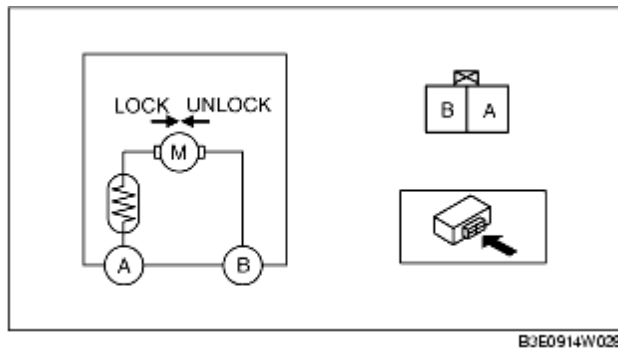

- If not as specified, replace the liftgate latch and lock actuator.

Lock actuator operation	Connection	
	B+	GND
Lock	A	B
Unlock	B	A