



## LIFTGATE LATCH SWITCH INSPECTION

B3E091462490W04

1. When inspecting the latch, press the latch lever using a flathead screwdriver or a similar tool.

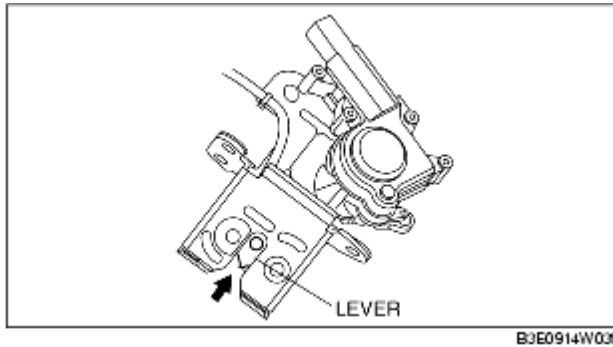

2. Inspect for continuity between the liftgate latch switch terminals.

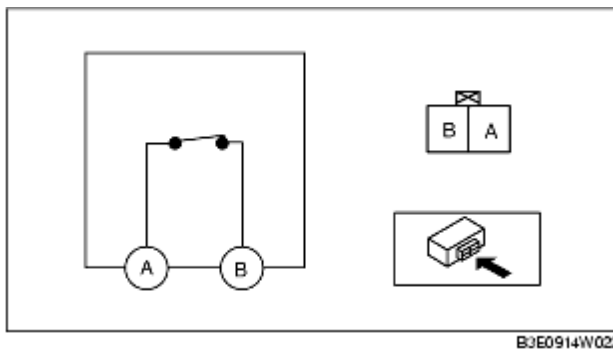

- If not as specified, replace the liftgate latch and lock actuator.

Latch condition	Terminal	
	A	B
Latch (liftgate is closed)		
Unlatch (liftgate is open)	○ — ○	○ — ○

○ — ○ : Continuity

B3E0914W021