


LIFTGATE LOCK STRIKER REMOVAL/INSTALLATION

B3E091462490W06

1. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/INSTALLATION](#).)
2. Remove the bolts, then remove the liftgate lock striker.

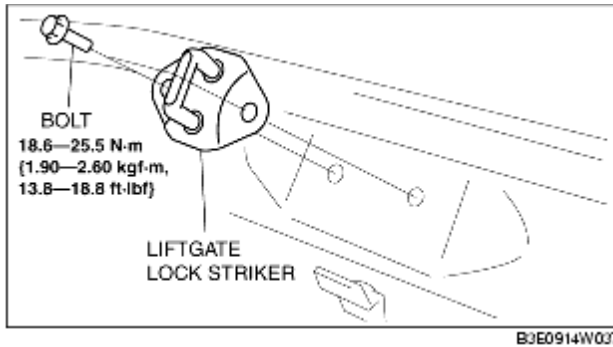

3. Install in the reverse order of removal.
4. Adjust the liftgate. (See [LIFTGATE ADJUSTMENT](#).)