


FUEL-FILLER LID OPENER REMOVAL/INSTALLATION [L.H.D.]

B3E091466640W01

1. To remove the fuel-filler lid opener, remove the following procedure:

- 5HB

- Remove the hole cover on the trunk side trim. (RH)

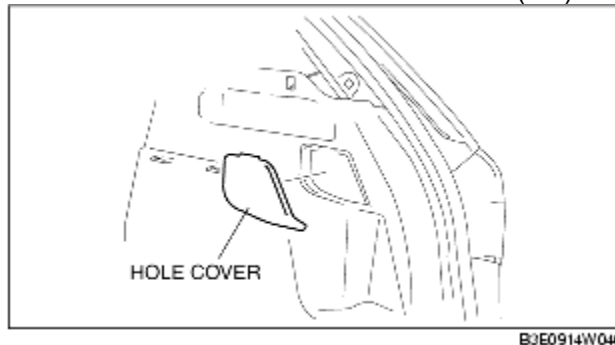

B3E0914W046

- 4SD

- Remove the trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
- Slightly bend back the trunk side trim. (RH) (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION.](#))

2. To remove the fuel-filler lid opener lever, remove the following part:

- (1) Front scuff plate (driver's side) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))

3. When removing the fuel-filler lid opener cable, perform the following procedure:

4. Remove the following parts:


- (1) Rear scuff plate (driver's side) (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (2) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
- (3) Tire house trim (driver's side) (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
- (4) B-pillar lower trim (driver's side) (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
- (5) Front seat (driver's side) (See [FRONT SEAT REMOVAL/INSTALLATION.](#))

5. Partially peel back the floor covering so that the fuel-filler lid opener cable can be removed.

6. Remove the fuel-filler lid opener cable from clips A.

7. Remove in the order indicated in the table.

8. Install in the reverse order of removal.

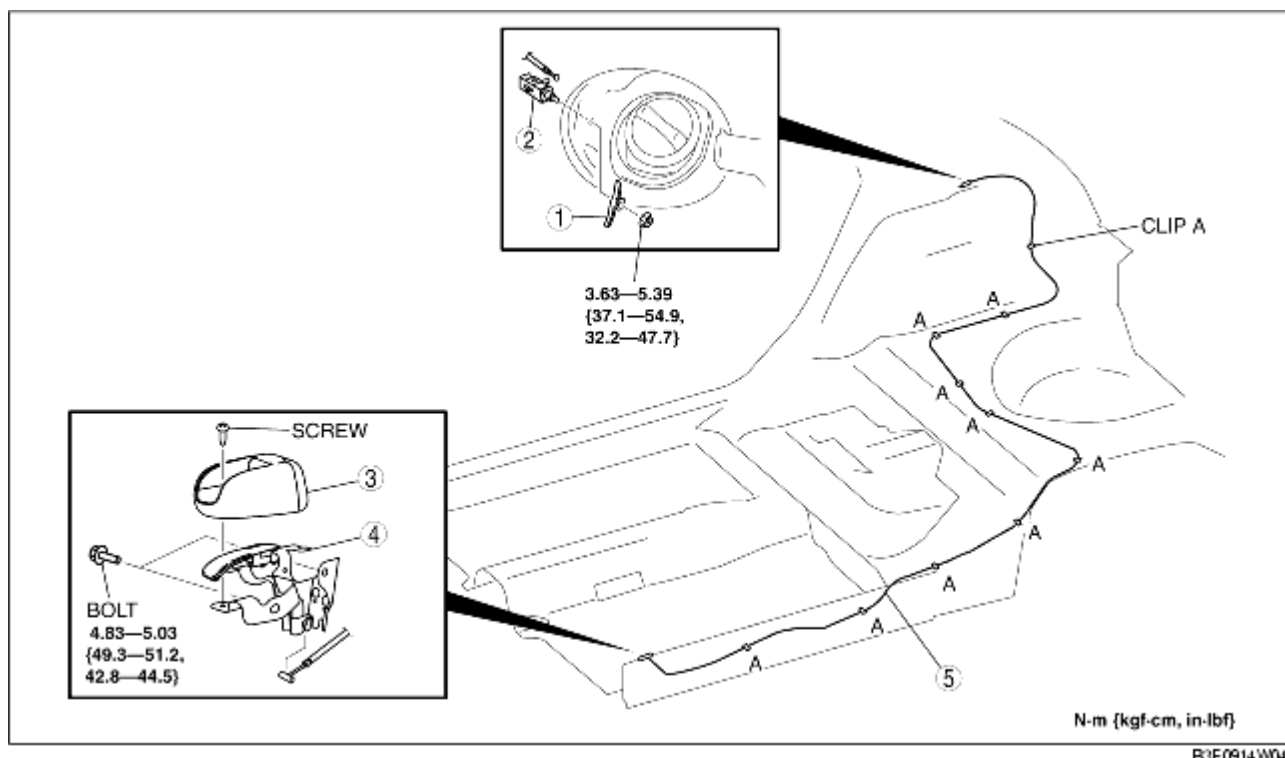

1	Lift spring
2	Fuel-filler lid opener
3	Fuel-filler lid opener lever cover
4	Fuel-filler lid opener lever
5	Fuel-filler lid opener cable