

COIL ANTENNA REMOVAL/INSTALLATION

B3E091467002W01

Note


- Do not remove the coil antenna unless you are replacing it.

1. Disconnect the negative battery cable.

2. Remove the following parts:

- (1) Bonnet release lever (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[L.H.D.\]](#).) (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[R.H.D.\]](#).)
- (2) Front scuff plate (Driver's side) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
- (3) Front side trim (Driver's side) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION](#).)
- (4) Lower panel (See [LOWER PANEL REMOVAL/INSTALLATION](#).)
- (5) Column cover (See [COLUMN COVER REMOVAL/INSTALLATION](#).)

3. Disconnect the coil antenna connector.

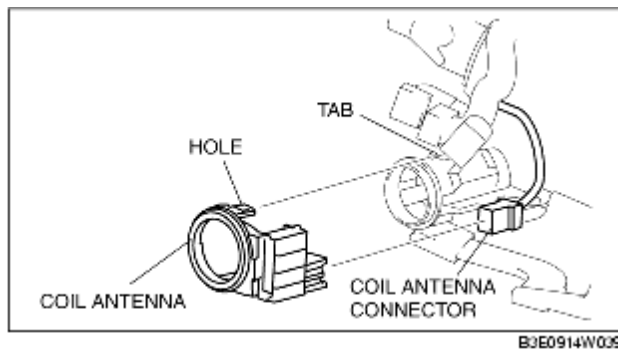

4. Detach the steering lock tabs from the holes on the coil antenna.

5. Install in the reverse order of removal.