


TRUNK LID OPENER INSPECTION

B3E091467002W04

1. Apply battery positive voltage to the trunk lid opener terminals, and inspect the trunk lid opener operation.

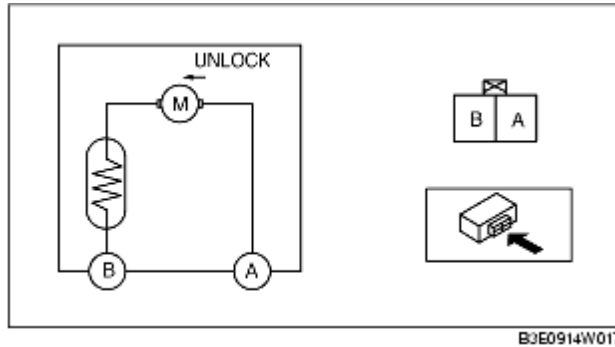

- If the trunk lid opener does not operate as indicated in the table, replace the trunk lid latch and opener.

Operation	Terminal	
	A	B
Unlock	B+	GND