



TRUNK LID LATCH SWITCH INSPECTION

B3E091467002W05

1. When inspecting the latch, press the latch lever using a flathead screwdriver or a similar tool.

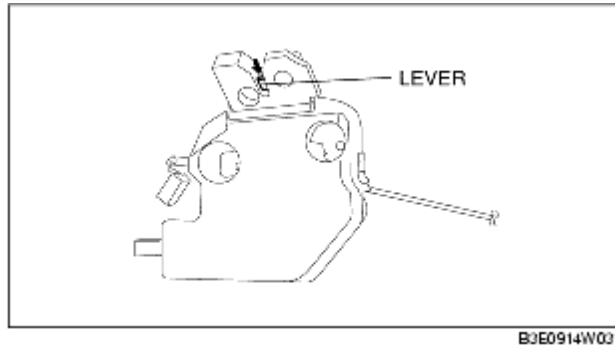

2. Inspect for continuity between the trunk lid latch switch terminals.

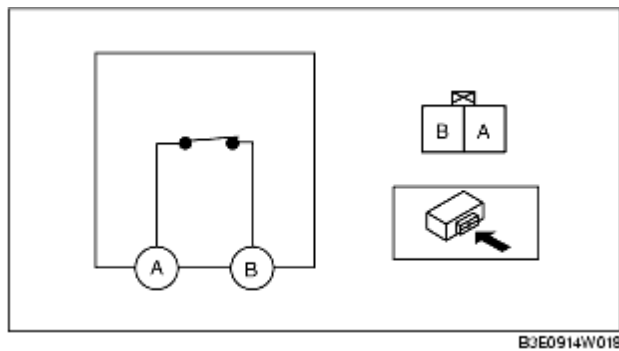

- If not as specified, replace the trunk lid latch and lock actuator.

Latch condition	Terminal	
	A	B
Latch (trunk lid is closed)		
Unlatch (trunk lid is open)	○ — ○ : Continuity	

The diagram is labeled B3E0914W019 at the bottom right.