


TRUNK LID KEY CYLINDER REMOVAL/INSTALLATION

B3E091467002W06

1. Disconnect the negative battery cable.
2. Remove the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/INSTALLATION](#).)
3. Detach the rod from the trunk lid key cylinder.
4. Disconnect the trunk lid key cylinder connector.
5. Remove the nuts, then remove the trunk lid key cylinder.

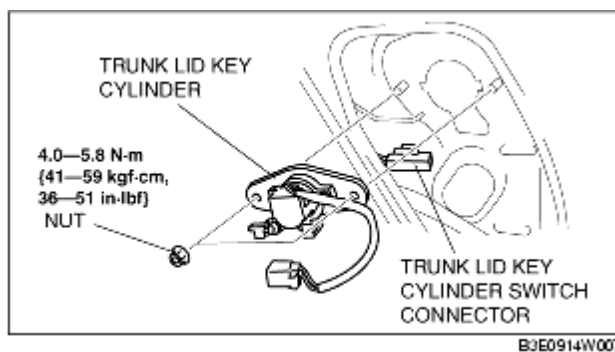

6. Install in the reverse order of removal.