


TRUNK LID KEY CYLINDER SWITCH INSPECTION

B3E091467002W07

1. Inspect for continuity between the trunk lid key cylinder switch terminals.

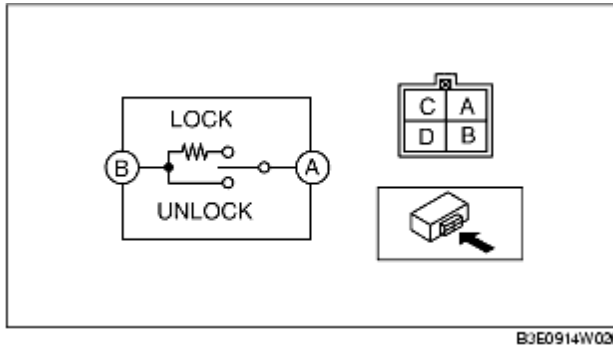

- If not as specified, replace the trunk lid key cylinder.

Key cylinder position	Terminal	
	A	B
Neutral		
Lock	○ — R — ○	R
Unlock	○ — ○	

R: 950—1,050 ohms

B3E0914W027