


## TRUNK LID LATCH AND OPENER REMOVAL/INSTALLATION

B3E091467005W01

1. Disconnect the negative battery cable.
2. Remove the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/INSTALLATION](#).)
3. Detach the rod from the trunk lid key cylinder.
4. Disconnect the trunk lid opener connector and the trunk lid latch switch connector.

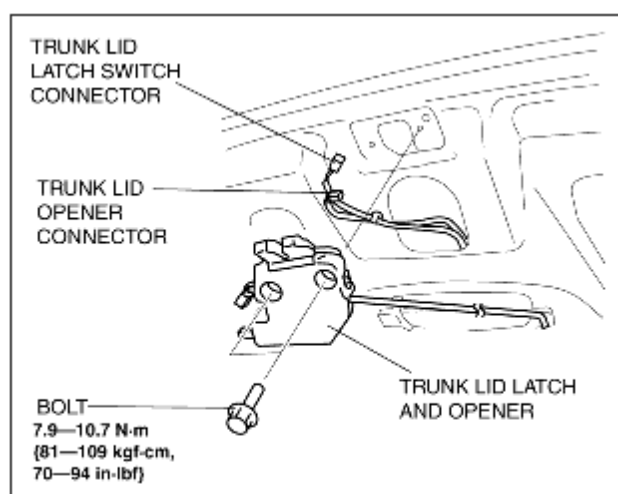

B3E0914W008

5. Remove the bolts, then remove the trunk lid latch and opener.
6. Install in the reverse order of removal.
7. Adjust the trunk lid. (See [TRUNK LID ADJUSTMENT](#).)