


TRUNK LID KEY CYLINDER PUSH SWITCH INSPECTION

B3E091467005W06

1. Inspect for continuity between the trunk lid key cylinder push switch terminals.

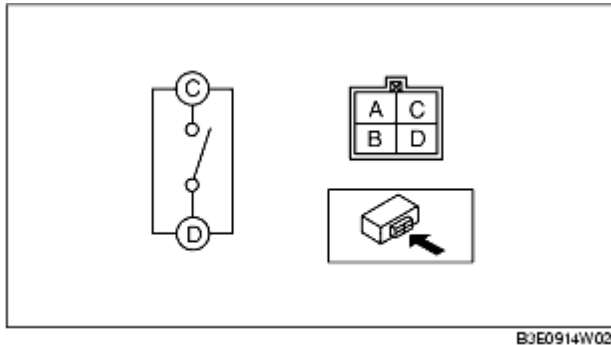

B3E0914W024

- If not as specified, replace the trunk lid key cylinder.

Operation	Terminal	
	C	D
On (pressed)	○	○
Off		

○—○ : Continuity

B3E0914W025