


# TRUNK LID LOCK STRIKER REMOVAL/INSTALLATION

---

B3E091467005W07

1. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
2. Remove the bolts, then remove the trunk lid striker.

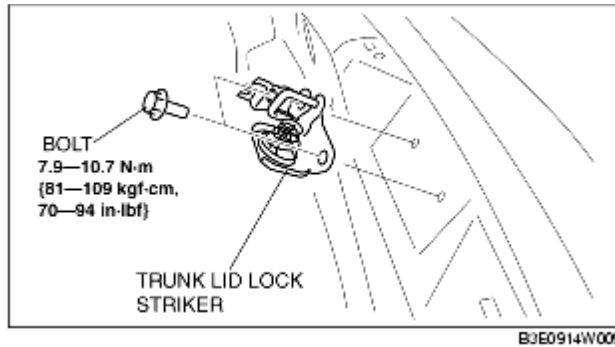

3. Install in the reverse order of removal.
4. Adjust the trunk lid. (See [TRUNK LID ADJUSTMENT.](#))