



TRANSMITTER BATTERY REPLACEMENT

B3E091467543W01

1. Insert a small screwdriver into the slot and gently pry open the transmitter.

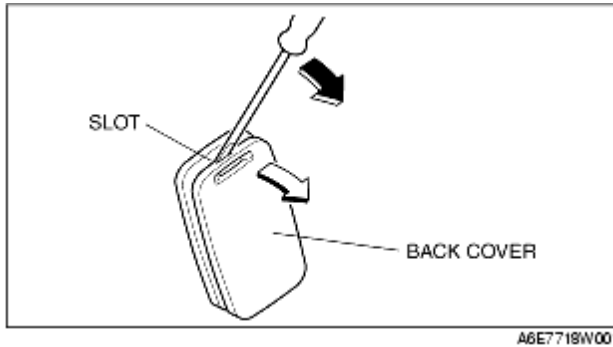


2. Press the portion of the battery indicated by A and remove the battery.

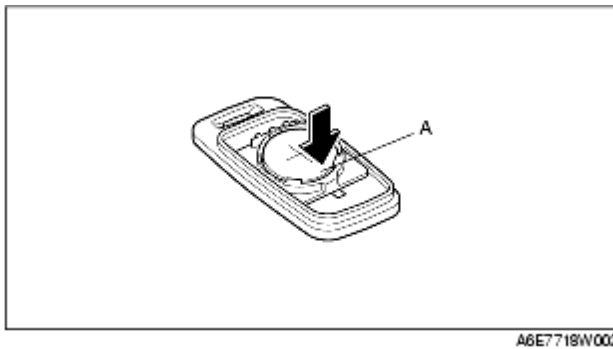

3. Install a new battery (CR2025) into the front portion of the holder with the positive pole (+) facing up. Press on the B portion of the battery to set the battery.

4. Align the front and back covers and snap the transmitter shut.

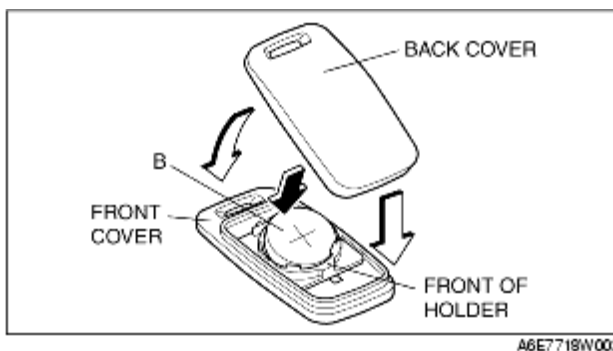

Battery specification
Lithium CR2025 × 1

Note

- The batteries will last about **2 years** when used **10 times** a day.