


SUNROOF UNIT REMOVAL/INSTALLATION

B3E091569850W02

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Console (4SD) (See [CONSOLE REMOVAL/INSTALLATION.](#))
 - (2) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (3) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
 - (4) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (5) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (6) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
 - (7) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (8) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
 - (9) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
 - (10) Trunk side upper trim (5HB) (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (11) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (12) Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
 - (13) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION.](#))
 - (14) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
 - (15) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
 - (16) Headliner (See [HEADLINER REMOVAL/INSTALLATION.](#))
 - (17) Head impact pad (See [HEAD IMPACT PAD REMOVAL/INSTALLATION.](#))
 - (18) Glass panel (See [GLASS PANEL REMOVAL/INSTALLATION.](#))
3. Disconnect the front and rear drain hoses from the sunroof frame.
4. Remove the bolts and nuts, then remove the sunroof unit.

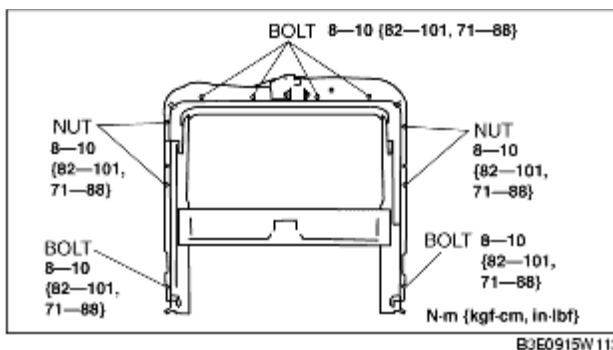

5. Install in the reverse order of removal.
6. Adjust the glass panel. (See [GLASS PANEL ADJUSTMENT.](#))