


SUNROOF MOTOR REMOVAL/INSTALLATION

B3E091569873W01

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Console (4SD) (See [CONSOLE REMOVAL/INSTALLATION.](#))
 - (2) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (3) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
 - (4) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (5) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (6) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
 - (7) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (8) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
 - (9) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
 - (10) Trunk side upper trim (5HB) (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (11) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (12) Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
 - (13) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION.](#))
 - (14) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
 - (15) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
 - (16) Headliner (See [HEADLINER REMOVAL/INSTALLATION.](#))
3. Disconnect the sunroof motor connector.

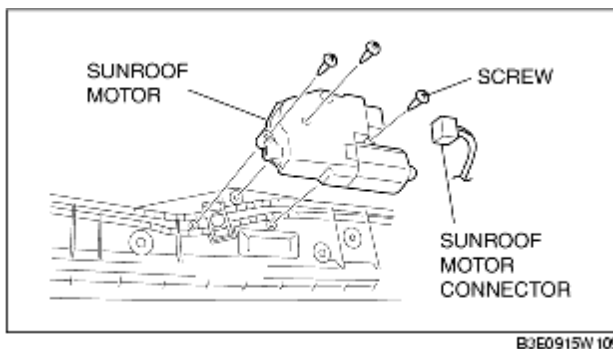

4. Remove the screws, then remove the sunroof motor.
5. Install in the reverse order of removal.

Note

- If the glass panel or the sunroof motor is moved with the sunroof motor removed, initial position setting of the sunroof motor will be required. Perform initial position setting referring to the Sunroof Motor Assembly Note. (See [Sunroof Motor Assembly Note.](#))