

FRONT DRAIN HOSE REMOVAL


B3E091569920W01

1. Remove the following parts:

- (1) Console (4SD) (See [CONSOLE REMOVAL/INSTALLATION.](#))
- (2) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
- (3) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
- (4) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (5) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (6) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
- (7) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.](#))
- (8) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
- (9) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
- (10) Trunk side upper trim (5HB) (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
- (11) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
- (12) Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
- (13) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION.](#))
- (14) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
- (15) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
- (16) Headliner (See [HEADLINER REMOVAL/INSTALLATION.](#))
- (17) Front door (See [FRONT DOOR REMOVAL/INSTALLATION.](#))
- (18) Dashboard (See [DASHBOARD REMOVAL/INSTALLATION.](#))

2. Disconnect the front drain hose from the sunroof frame.

3. Remove the front drain hose from the clips.

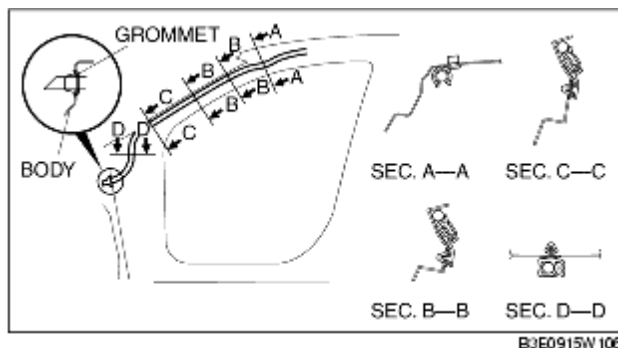

4. Pull the front drain hose into the vehicle interior and remove the front drain hose.