

# REAR DRAIN HOSE REMOVAL


B3E091569922W01

## 1. Remove the following parts:

- (1) Console (4SD) (See [CONSOLE REMOVAL/INSTALLATION.](#))
- (2) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
- (3) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
- (4) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (5) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (6) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
- (7) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.](#))
- (8) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
- (9) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
- (10) Trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
- (11) Trunk side upper trim (5HB) (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
- (12) Trunk side trim (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION.](#))
- (13) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
- (14) Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
- (15) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION.](#))
- (16) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
- (17) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
- (18) Headliner (See [HEADLINER REMOVAL/INSTALLATION.](#))

## 2. Remove the sunroof frame from the rear drain hose.

## 3. Remove the rear drain hose from the clips.

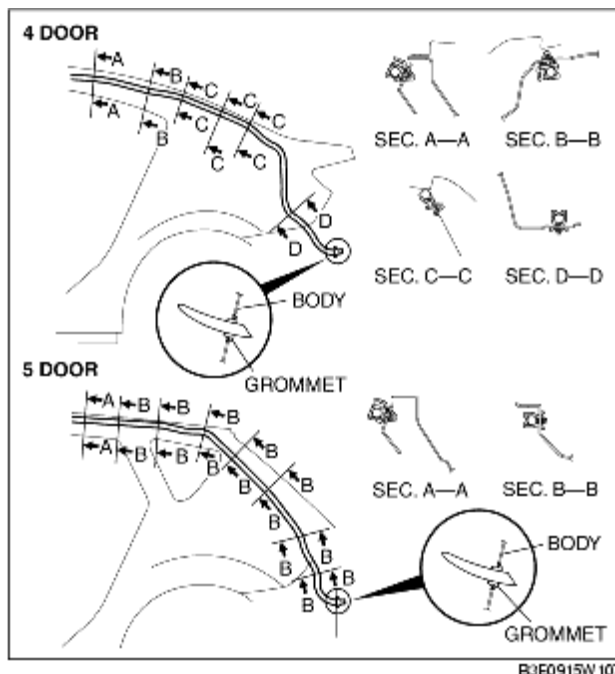

## 4. Pull the rear drain hose into the vehicle interior and remove the rear drain hose.