


# RADIATOR GRILLE REMOVAL/INSTALLATION

B3E091650710W01

## 4SD


1. Remove the screws.
2. Press clip A in the direction of the arrow, pull the radiator grille outward and remove from the front bumper.

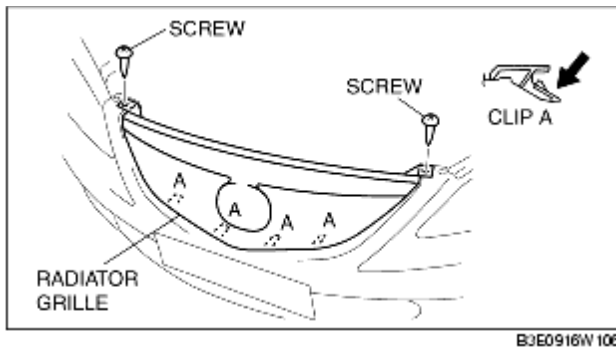

3. Install in the reverse order of removal.

## 5HB

1. Remove the nuts.
2. Detach clips A and remove the radiator grille.

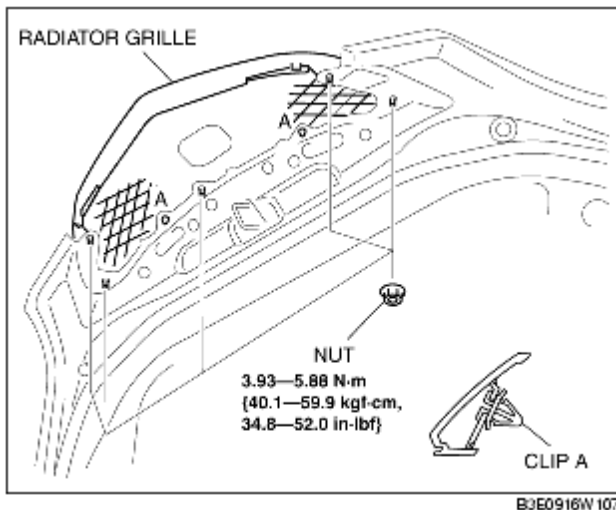

3. Install in the reverse order of removal.