


FRONT FLAP REMOVAL/INSTALLATION

B3E091651840W01

1. Remove the screw and fasteners.

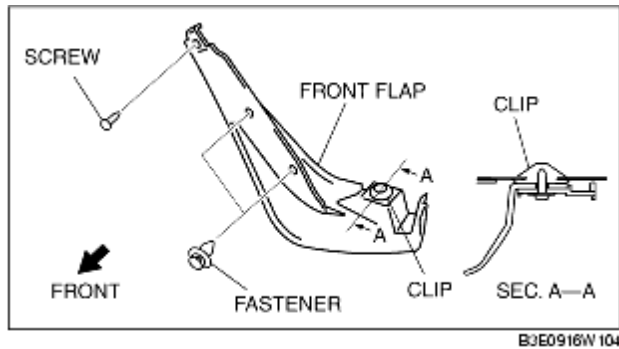

2. Detach the clip, then remove the front flap.
3. Install in the reverse order of removal.