

# EXTRACTOR CHAMBER REMOVAL/INSTALLATION


---

B3E091651908W01

1. Remove the following parts:

- (1) Trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
- (2) Trunk side trim (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION.](#))
- (3) Rear combination light (See [REAR COMBINATION LIGHT REMOVAL/INSTALLATION.](#))
- (4) Rear bumper (See [REAR BUMPER REMOVAL/INSTALLATION.](#))

2. Detach clips A by squeezing them from inside the vehicle, and remove the extractor chamber from the body.

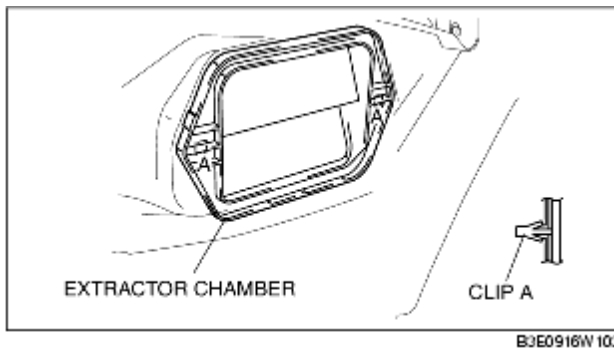

3. Install in the reverse order of removal.