


REAR FLAP REMOVAL/INSTALLATION

B3E091651940W01

1. Remove the screws.

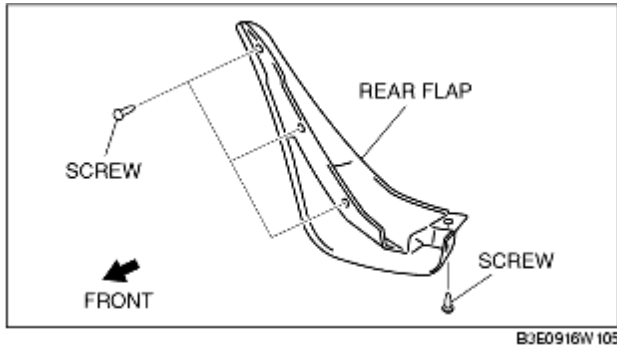

2. Remove the rear flap.
3. Install in the reverse order of removal.