


REAR SPOILER REMOVAL/INSTALLATION

B3E091651960W01

4SD

1. Remove the nuts.

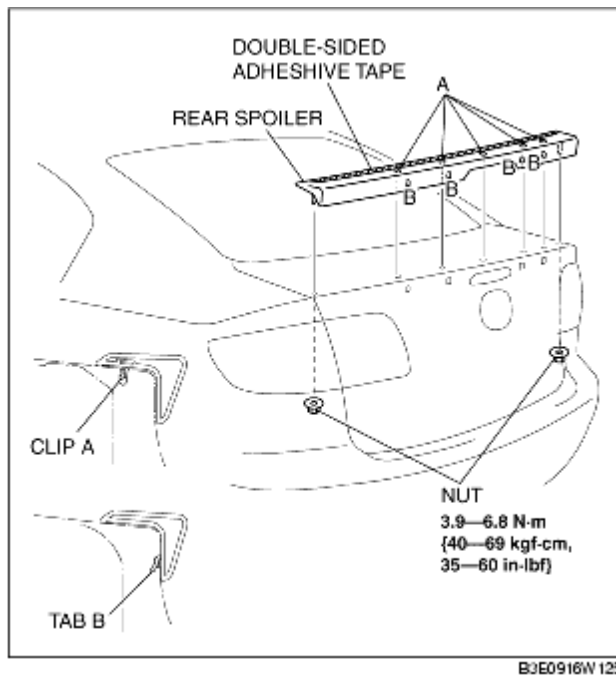


2. While cutting the double-sided adhesive tape using a flathead screwdriver or a razor, separate the rear spoiler from the trunk lid.

Warning

- Using a razor with bare hands can cause injury. Always wear gloves when using a razor.


3. Pull the rear spoiler upward, then disengage clips A and tabs B from the trunk lid.
4. Remove the rear spoiler.
5. Install in the reverse order of removal.

- (1) Attach double-sided adhesive tape to the rear spoiler as shown in the figure.

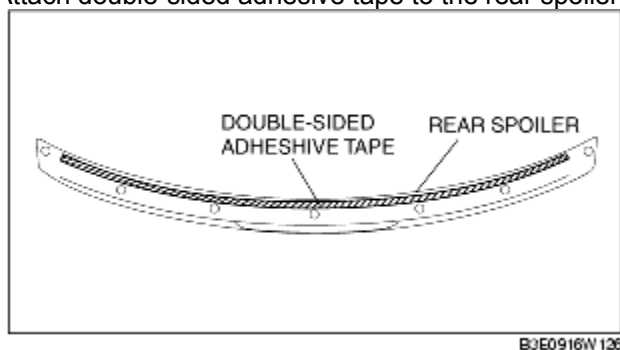

5HB

1. Remove the liftgate upper trim. (See [LIFTGATE UPPER TRIM REMOVAL/INSTALLATION](#).)
2. Remove the bolts and nut.

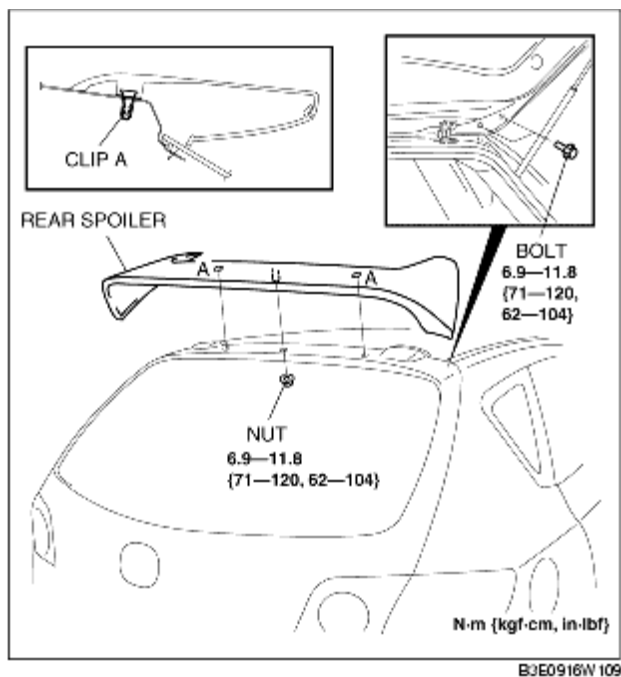

3. Pull the rear spoiler upward, then disengage clips A from the liftgate.
4. Remove the rear spoiler.
5. Install in the reverse order of removal.