


# ROOF CARRIER BRACKET REMOVAL/INSTALLATION

B3E091670600W01

## 1. Remove the following parts:

- (1) Console (4SD) (See [CONSOLE REMOVAL/INSTALLATION.](#))
- (2) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
- (3) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
- (4) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (5) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (6) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
- (7) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.](#))
- (8) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
- (9) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
- (10) Trunk side upper trim (5HB) (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
- (11) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
- (12) Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
- (13) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION.](#))
- (14) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
- (15) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
- (16) Headliner (See [HEADLINER REMOVAL/INSTALLATION.](#))
- (17) Roof molding (See [ROOF MOLDING REMOVAL.](#)) (See [ROOF MOLDING INSTALLATION.](#))

## 2. Remove the nuts.

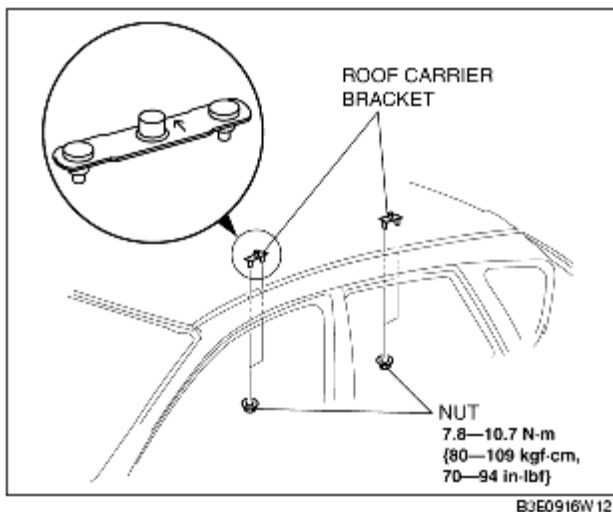

## 3. Remove the roof carrier bracket.

## 4. Install in the reverse order of removal.

### Note

- Install the roof carrier bracket so that the arrow on it faces inward.