


# INTERIOR TRIM LOCATION INDEX


B3E091755000W01

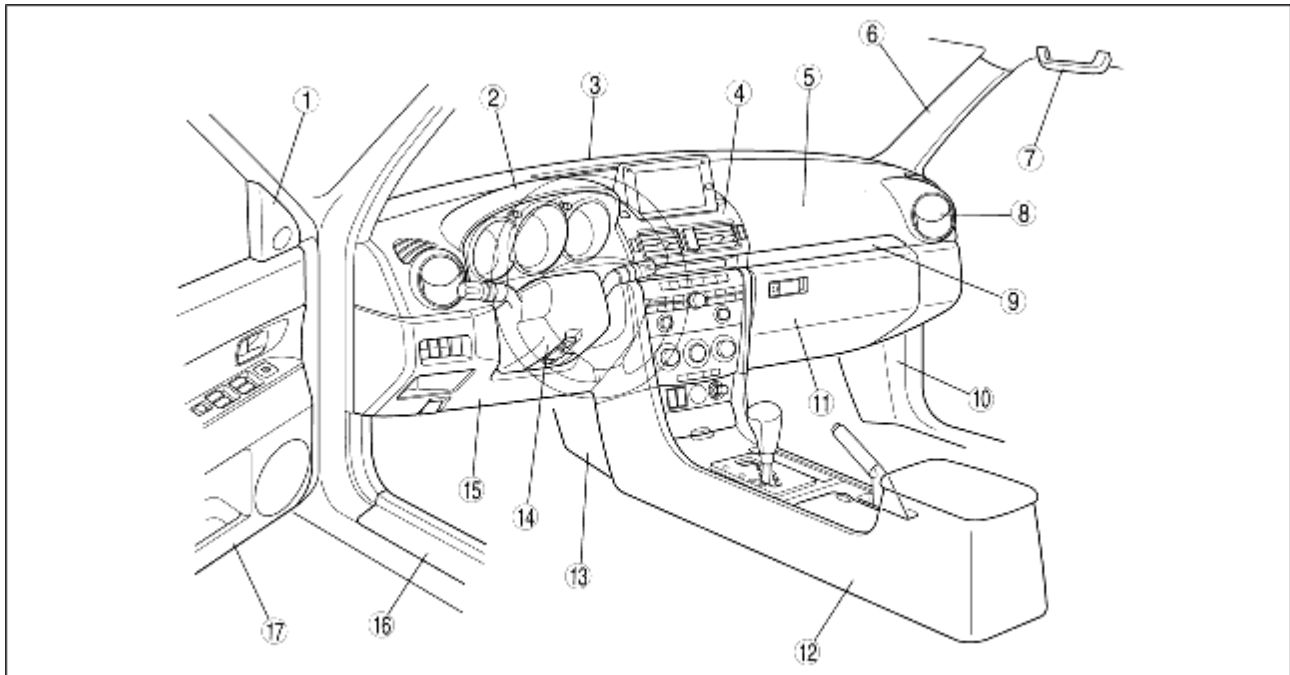

B3E0917W101

1	Inner garnish (See <a href="#">INNER GARNISH REMOVAL/INSTALLATION.</a> )
2	Meter hood (See <a href="#">METER HOOD REMOVAL/INSTALLATION.</a> )
3	Dashboard (See <a href="#">DASHBOARD REMOVAL/INSTALLATION.</a> )
4	Dashboard center panel (See <a href="#">DASHBOARD CENTER PANEL REMOVAL/INSTALLATION.</a> )
5	Dashboard garnish (See <a href="#">DASHBOARD GARNISH REMOVAL/INSTALLATION.</a> )
6	A-pillar trim (See <a href="#">A-PILLAR TRIM REMOVAL/INSTALLATION.</a> )
7	Assist handle (See <a href="#">ASSIST HANDLE REMOVAL/INSTALLATION.</a> )
8	Ventilator grille (See <a href="#">VENTILATOR GRILLE REMOVAL/INSTALLATION.</a> )
9	Decoration panel (See <a href="#">DECORATION PANEL REMOVAL/INSTALLATION.</a> )
10	Front side trim (See <a href="#">FRONT SIDE TRIM REMOVAL/INSTALLATION.</a> )
11	Glove compartment (See <a href="#">GLOVE COMPARTMENT REMOVAL/INSTALLATION.</a> )
12	Console (See <a href="#">CONSOLE REMOVAL/INSTALLATION.</a> ) (See <a href="#">CONSOLE DISASSEMBLY/ASSEMBLY.</a> )


13	Side wall (See <a href="#">SIDE WALL REMOVAL/INSTALLATION.</a> )
14	Column cover (See <a href="#">COLUMN COVER REMOVAL/INSTALLATION.</a> )
15	Lower panel (See <a href="#">LOWER PANEL REMOVAL/INSTALLATION.</a> )
16	Front scuff plate (See <a href="#">FRONT SCUFF PLATE REMOVAL/INSTALLATION.</a> )
17	Front door trim (See <a href="#">FRONT DOOR TRIM REMOVAL/INSTALLATION.</a> )

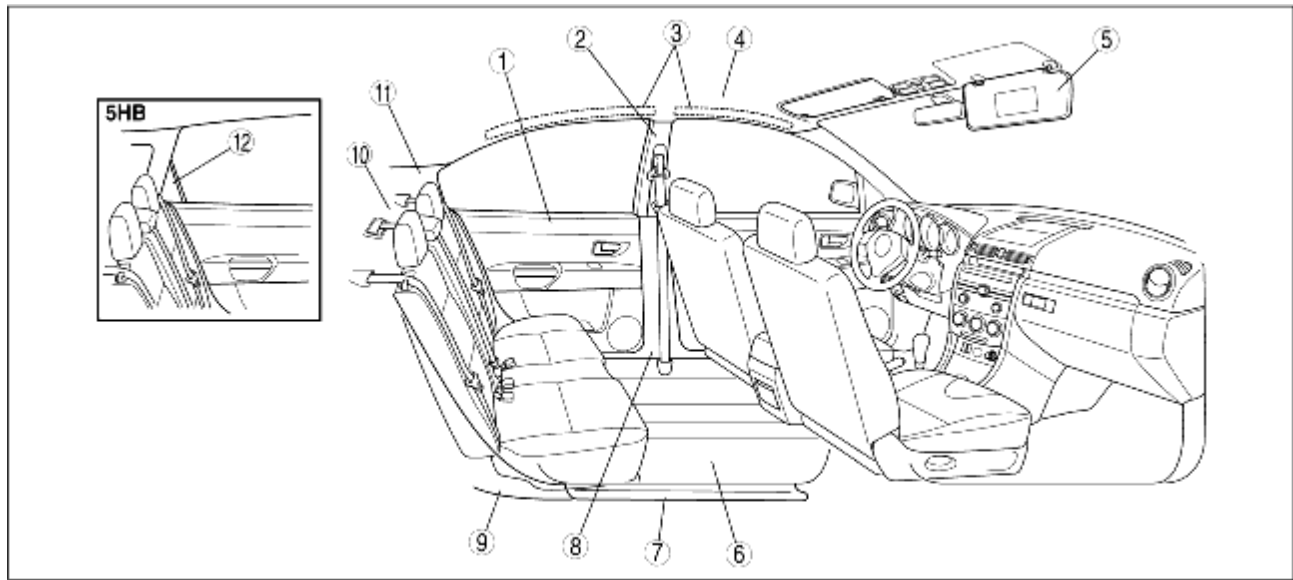

B3E0917W102

1	Rear door trim (See <a href="#">REAR DOOR TRIM REMOVAL/INSTALLATION.</a> )
2	B-pillar upper trim (See <a href="#">B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.</a> )
3	Head impact pad (See <a href="#">HEAD IMPACT PAD REMOVAL/INSTALLATION.</a> )
4	Headliner (See <a href="#">HEADLINER REMOVAL/INSTALLATION.</a> )
5	Sunvisor (See <a href="#">SUNVISOR REMOVAL/INSTALLATION.</a> )
6	Floor covering (See <a href="#">FLOOR COVERING REMOVAL/INSTALLATION.</a> )
7	Rear scuff plate (See <a href="#">REAR SCUFF PLATE REMOVAL/INSTALLATION.</a> )
8	B-pillar lower trim (See <a href="#">B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.</a> )
9	Tire house trim (See <a href="#">TIRE HOUSE TRIM REMOVAL/INSTALLATION.</a> )
10	Rear package trim (See <a href="#">REAR PACKAGE TRIM REMOVAL/INSTALLATION.</a> )
11	C-pillar trim (See <a href="#">C-PILLAR TRIM REMOVAL/INSTALLATION.</a> )

12	Sail garnish (See <a href="#">SAIL GARNISH REMOVAL/INSTALLATION.</a> )
----	---

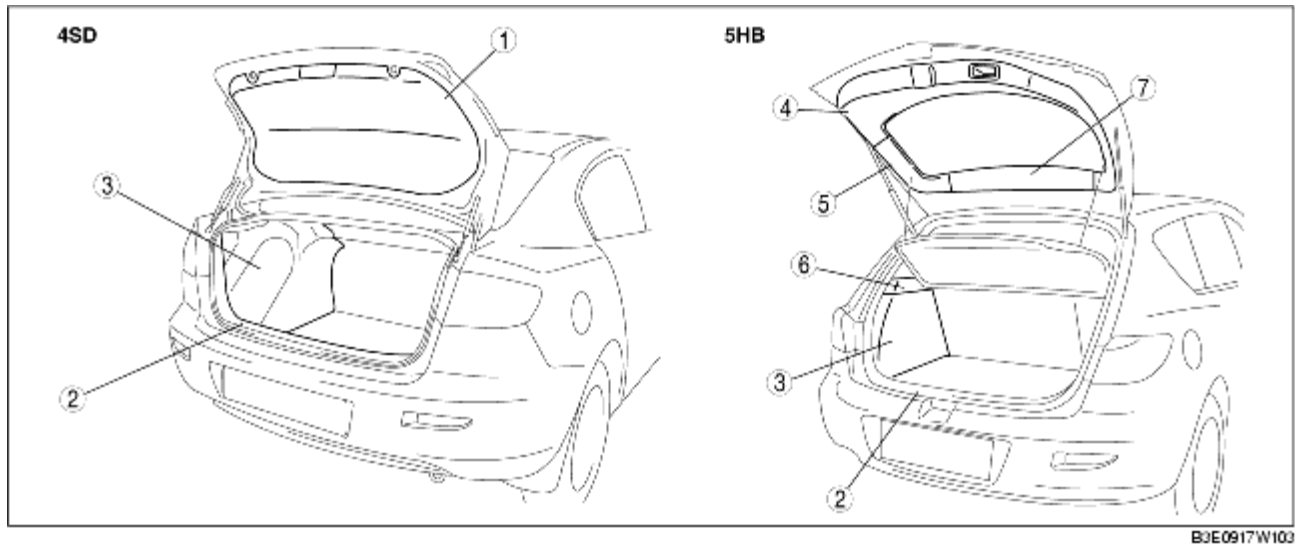

1	Trunk lid trim (See <a href="#">TRUNK LID TRIM REMOVAL/INSTALLATION.</a> )
2	Trunk end trim (See <a href="#">TRUNK END TRIM REMOVAL/INSTALLATION.</a> )
3	Trunk side trim (See <a href="#">TRUNK SIDE TRIM REMOVAL/INSTALLATION.</a> )
4	Liftgate lower trim (See <a href="#">LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.</a> )
5	Liftgate side trim (See <a href="#">LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.</a> )
6	Trunk side upper trim (See <a href="#">TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.</a> )
7	Liftgate upper trim (See <a href="#">LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.</a> )