

METER HOOD REMOVAL/INSTALLATION


B3E091758800W01

1. Remove the following parts:

- (1) Front scuff plate (Driver's side) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (2) Front side trim (Driver's side) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
- (3) Decoration panel (See [DECORATION PANEL REMOVAL/INSTALLATION.](#))
- (4) Lower panel (See [LOWER PANEL REMOVAL/INSTALLATION.](#))

2. Detach the fit of the meter hood rubber from the upper column cover.

3. Pull the meter hood outward and detach the tabs A and locator pins B.

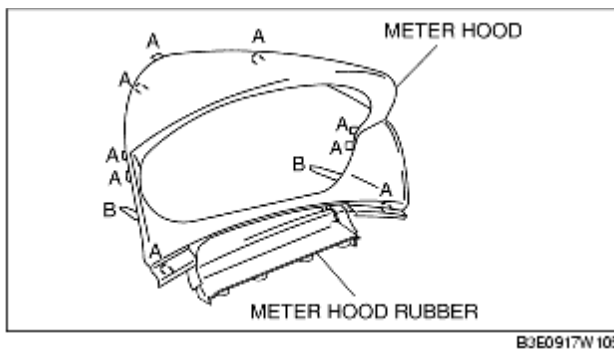

4. Remove the meter hood.

5. Install in the reverse order of removal.