


COLUMN COVER REMOVAL/INSTALLATION

B3E091760720W01

1. Remove the front scuff plate. (Driver's side) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
2. Remove the front side trim. (Driver's side) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
3. Remove the lower panel. (See [LOWER PANEL REMOVAL/INSTALLATION.](#))
4. Detach the fit of the upper column cover from the meter hood rubber.

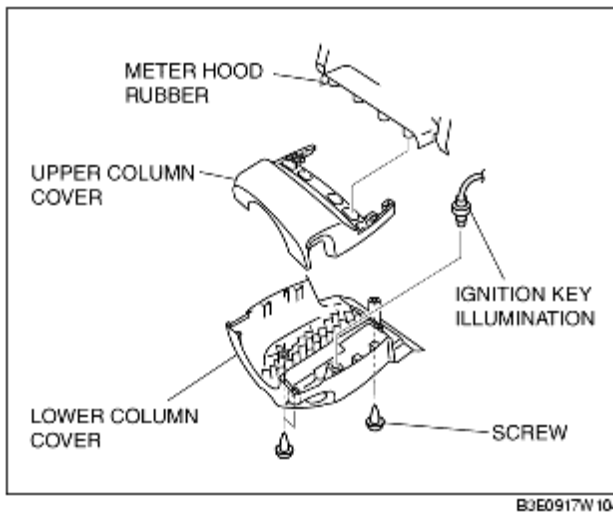

5. Remove the upper column cover.
6. Remove the ignition key illumination.
7. Remove the screws.
8. Remove the lower column cover.
9. Install in the reverse order of removal.