


## LOWER PANEL REMOVAL/INSTALLATION

---

B3E091764310W01

1. Disconnect the negative battery cable.
2. Detach the bonnet release lever from the lower panel. (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[L.H.D.\]](#).) (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[R.H.D.\]](#).)
3. Remove the front scuff plate. (Driver's side) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
4. Remove the front side trim. (Driver's side) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION](#).)
5. Remove the screw.

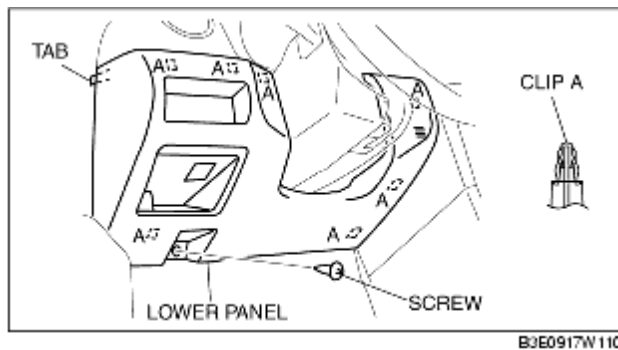

6. Pull the lower panel outward, and detach clips A and tab.
7. Disconnect the panel light control switch connector and the headlight leveling switch connector.
8. Remove the lower panel.
9. Install in the reverse order of removal.