


VENTILATOR GRILLE REMOVAL/INSTALLATION

B3E091764810W01

Driver's Side

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (2) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (3) Front side trim (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
 - (4) Lower panel (See [LOWER PANEL REMOVAL/INSTALLATION.](#))
 - (5) Decoration panel (See [DECORATION PANEL REMOVAL/INSTALLATION.](#))
 - (6) Dashboard center panel (See [DASHBOARD CENTER PANEL REMOVAL/INSTALLATION.](#))
 - (7) Meter hood (See [METER HOOD REMOVAL/INSTALLATION.](#))
 - (8) Instrument cluster (See [INSTRUMENT CLUSTER REMOVAL/INSTALLATION.](#))
 - (9) Dashboard garnish (See [DASHBOARD GARNISH REMOVAL/INSTALLATION.](#))
3. Pull the driver-side ventilator grille outward and remove it.
4. Remove the screw, then remove the driver-side demister grille.

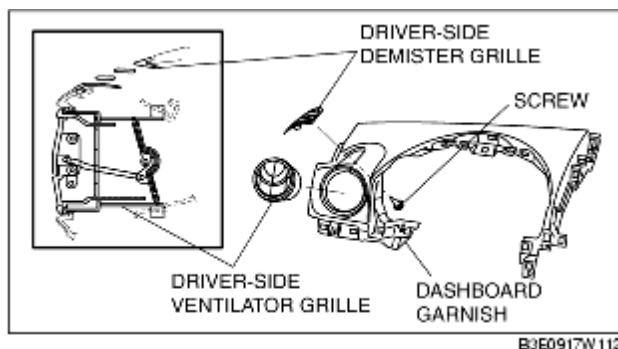

5. Install in the reverse order of removal.


Passenger's Side

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (2) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (3) Front side trim (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
 - (4) Glove compartment (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION.](#))
 - (5) Decoration panel (See [DECORATION PANEL REMOVAL/INSTALLATION.](#))
 - (6) Dashboard center panel (See [DASHBOARD CENTER PANEL REMOVAL/INSTALLATION.](#))
 - (7) Dashboard garnish (See [DASHBOARD GARNISH REMOVAL/INSTALLATION.](#))
3. Pull the passenger-side ventilator grille outward and remove it.
4. Remove the screw, then remove the passenger-side demister grille.

5. Install in the reverse order of removal.

Center

1. Remove the decoration panel. (See [DECORATION PANEL REMOVAL/INSTALLATION](#).)
2. Remove the dashboard center panel. (See [DASHBOARD CENTER PANEL REMOVAL/INSTALLATION](#).)
3. Remove the screws, then remove the center ventilator grilles.

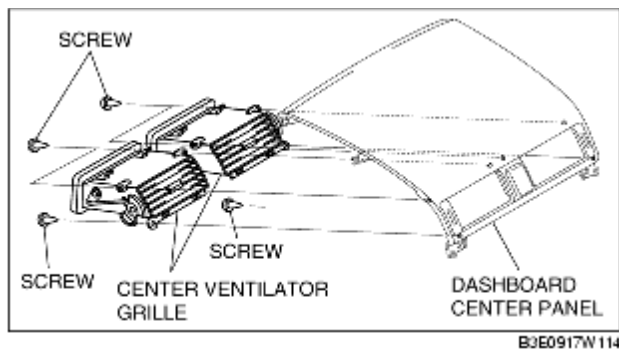

4. Install in the reverse order of removal.