



# HEADLINER REMOVAL/INSTALLATION

B3E091768040W01

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the following parts:
  - (1) Sunroof seaming welt (vehicles with sunroof)
  - (2) Console (4SD) (See [CONSOLE REMOVAL/INSTALLATION.](#))
  - (3) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
  - (4) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
  - (5) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
  - (6) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
  - (7) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
  - (8) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.](#))
  - (9) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
  - (10) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
  - (11) Trunk side upper trim (5HB) (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
  - (12) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
  - (13) Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
  - (14) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION.](#))
  - (15) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
  - (16) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
4. Disconnect the roof wiring harness connector and remove the roof wiring harness connector clip from the body.
5. Disconnect the rear washer hose. (5HB)
6. Remove the fasteners.

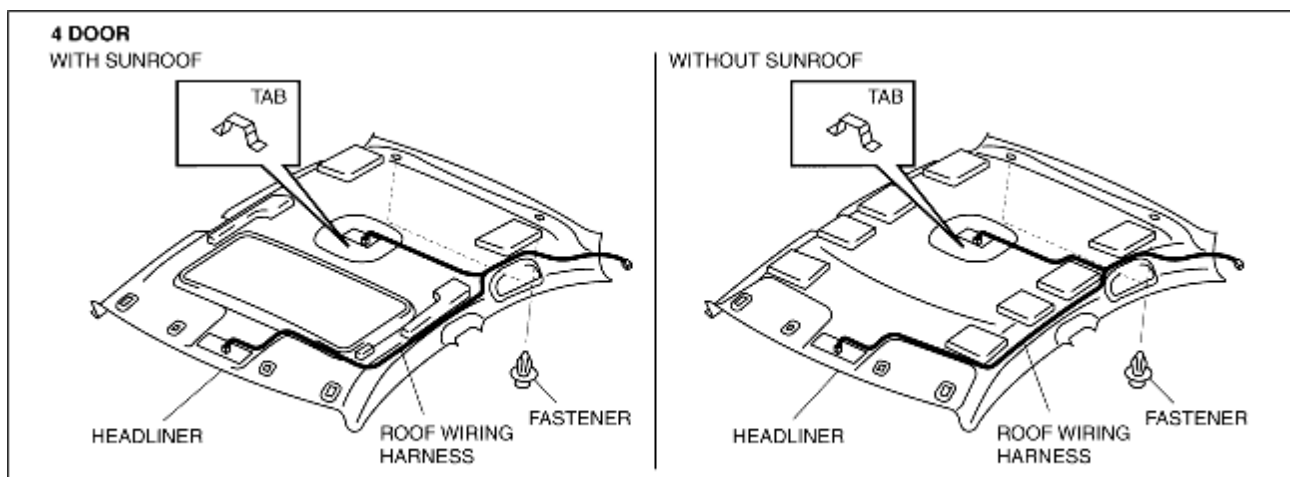

B3E0917W136

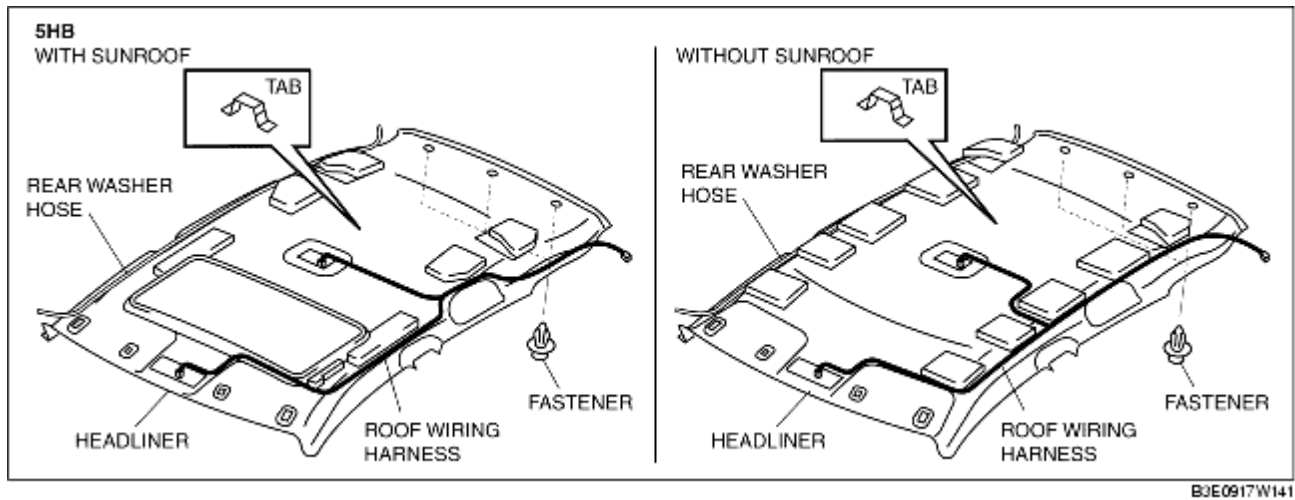

7. Detach the tab from the roof panel and remove the headliner.
8. Take the headliner out from the opened passenger-side door. (4SD)
9. Take the headliner out from the opened liftgate. (5HB)
10. Install in the reverse order of removal.