

## B-PILLAR UPPER TRIM REMOVAL/INSTALLATION

---


B3E091768190W01

1. Remove the following parts:

- (1) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION](#).)
- (2) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
- (3) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
- (4) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION](#).)

2. Partially peel back the seaming welt.

3. Pull the B-pillar upper trim outward and detach clips A and locator pin B from the body.

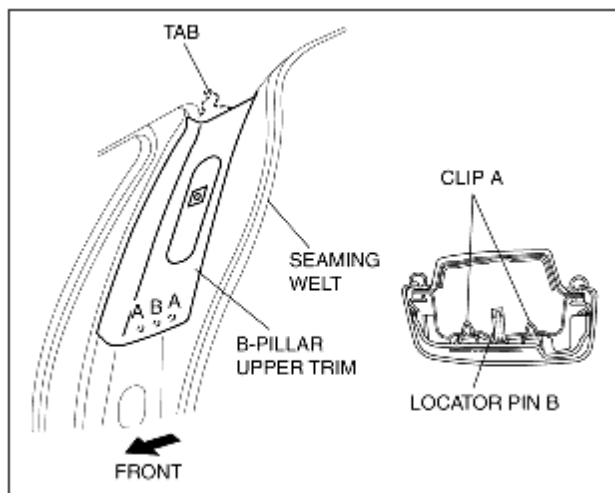

B3E0917W 127

4. Detach the tab from the body and remove the B-pillar trim.

5. Install in the reverse order of removal.