


B-PILLAR LOWER TRIM REMOVAL/INSTALLATION

B3E091768220W01

1. Remove the front scuff plate. (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
2. Remove the rear scuff plate. (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
3. Pull the area marked A, then remove one side of the B-pillar lower trim.

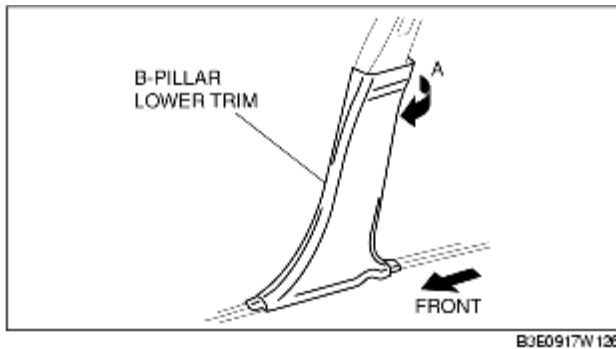

4. Pull the B-pillar lower trim outward and remove it.
5. Install in the reverse order of removal.