


# C-PILLAR TRIM REMOVAL/INSTALLATION

B3E091768250W01

## 4SD

1. Remove the rear seat. (See [REAR SEAT REMOVAL/INSTALLATION.](#))
2. Remove the rear scuff plate. (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
3. Remove the tire house trim. (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
4. Partially peel back the seaming welt.
5. Remove the fastener.

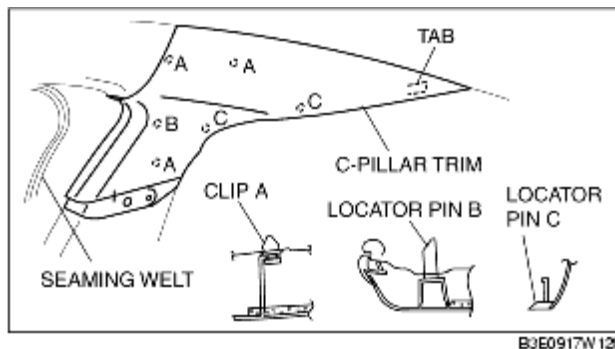

6. Detach clips A, locator pin B and C, using a fastener remover.
7. Detach the tab from the body and remove the C-pillar trim.
8. Install in the reverse order of removal.

## 5HB

1. Remove the following parts:
  - (1) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
  - (2) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
  - (3) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
  - (4) Trunk side upper trim (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
2. Partially peel back the seaming welt.
3. Remove the fasteners.

4. Detach clips A, B and locator pins C, using a fastener remover.
5. Remove the C-pillar trim.
6. Install in the reverse order of removal.