


REAR PACKAGE TRIM REMOVAL/INSTALLATION

B3E091768300W01

1. Remove the following parts:

- (1) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION](#).)
- (2) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
- (3) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION](#).)
- (4) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION](#).)

2. Remove the fasteners.

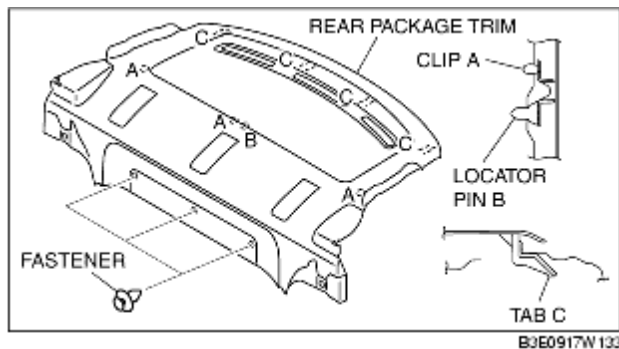

3. Pull the rear package trim upward and detach clips A and locator pin B from the body.
4. Detach tabs C from the body and remove the rear package trim.
5. Install in the reverse order of removal.