


FRONT SIDE TRIM REMOVAL/INSTALLATION

B3E091768370W01

1. Remove the front scuff plate. (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
2. Remove the fastener.

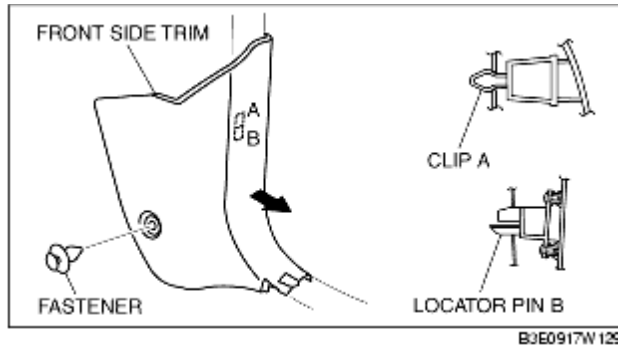

3. Pull the front side trim in the direction of the arrow and detach clip A and locator pin B.
4. Install in the reverse order of removal.