



# FRONT DOOR TRIM REMOVAL/INSTALLATION

B3E09176842YW01

1. Disconnect the negative battery cable. (vehicle with power window system or power outer mirror)
2. Using a small flathead screwdriver, open the cap and remove the screw, then remove the inner handle cover.

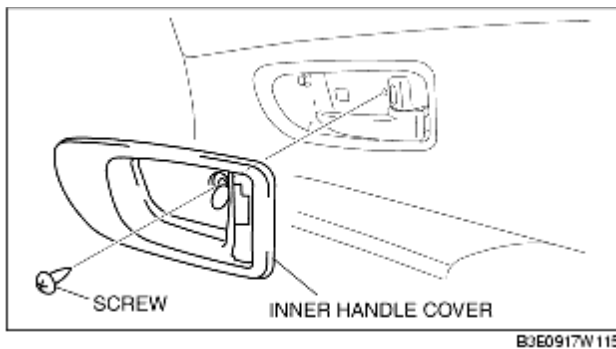

3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/INSTALLATION](#).)
4. Remove the regulator handle. (vehicle without power window system) (See [REGULATOR HANDLE REMOVAL](#).) (See [REGULATOR HANDLE INSTALLATION](#).)
5. Using a small flathead screwdriver, open the cap and remove the screw.

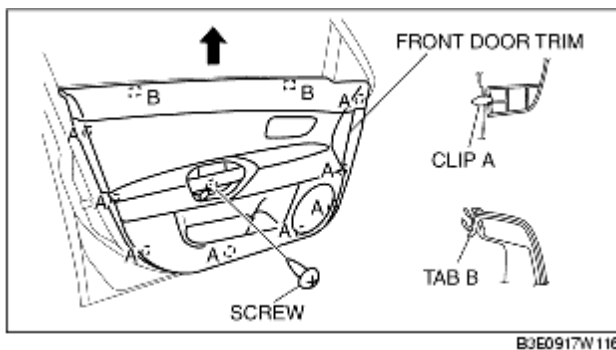

6. Detach clips A from the front door using a fastener remover.
7. Pull the front door trim upward and detach tabs B from the front door.
8. Disconnect the power window main switch connector and power outer mirror switch connector. (LH) (vehicle with power window system or power outer mirror)
9. Disconnect the power window subswitch connector. (RH) (vehicle with power window system)
10. Remove the front door trim.
11. Install in the reverse order of removal.