


# FLOOR COVERING REMOVAL/INSTALLATION

B3E091768660W01

1. Disconnect the negative battery cable.
2. Remove the following parts:
  - (1) Front seat (See [FRONT SEAT REMOVAL/INSTALLATION.](#))
  - (2) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
  - (3) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
  - (4) Console (See [CONSOLE REMOVAL/INSTALLATION.](#))
  - (5) Front side trim (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
  - (6) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
  - (7) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
  - (8) Lower anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
  - (9) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
  - (10) Fuel-filler lid opener lever cover (See [FUEL-FILLER LID OPENER REMOVAL/INSTALLATION \[L.H.D.\]](#).) (See [FUEL-FILLER LID OPENER REMOVAL/INSTALLATION \[R.H.D.\]](#).)
  - (11) Side wall (See [SIDE WALL REMOVAL/INSTALLATION.](#))
3. Remove fasteners A, B, and C.

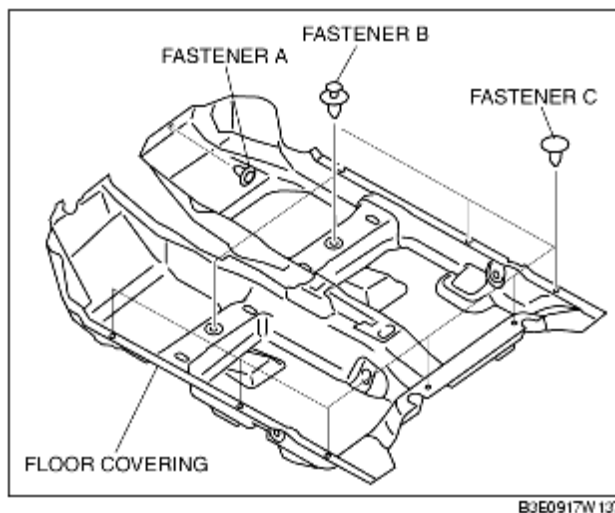

4. Take the floor covering out from the opened door.
5. Install in the reverse order of removal.