


REAR SCUFF PLATE REMOVAL/INSTALLATION

B3E091768730W01

1. Pull the rear scuff plate upward, detach clips A, locator pins B and C from the body, and then remove the rear scuff plate.

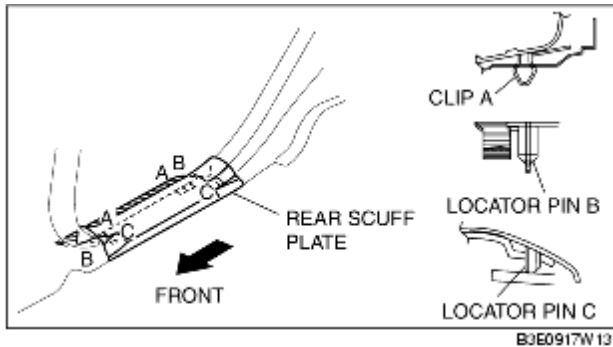

2. Install in the reverse order of removal.