
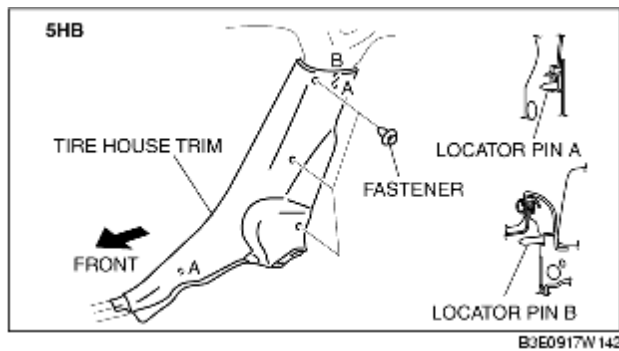


TIRE HOUSE TRIM REMOVAL/INSTALLATION

B3E091768750W01

1. Remove the rear seat. (See [REAR SEAT REMOVAL/INSTALLATION](#).)
2. Remove the rear scuff plate. (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
3. Remove the fasteners.

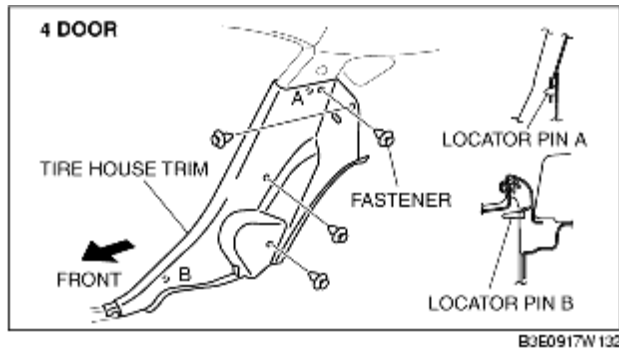

4. Pull the tire house trim outward and detach locator pins A and B.
5. Remove the tire house trim.
6. Install in the reverse order of removal.