

TRUNK SIDE TRIM REMOVAL/INSTALLATION


B3E0917688T0W01

4SD

1. Remove the following parts:

- (1) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
- (2) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (3) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
- (4) Trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
- (5) Service hole cover (LH)

2. Remove the fasteners, then remove the trunk side trim.

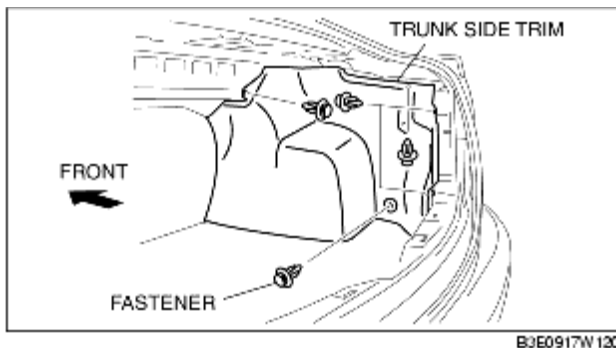


3. Install in the reverse order of removal.

5HB


1. Remove the following parts:

- (1) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
- (2) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (3) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
- (4) Trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
- (5) Trunk side upper trim (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
- (6) Cargo compartment light (See [CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION.](#))

2. Remove the screws, then remove the trunk board.

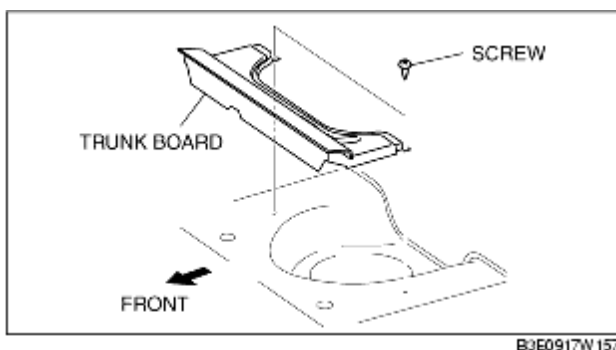

3. Remove the screws, then remove the cargo net hooks.

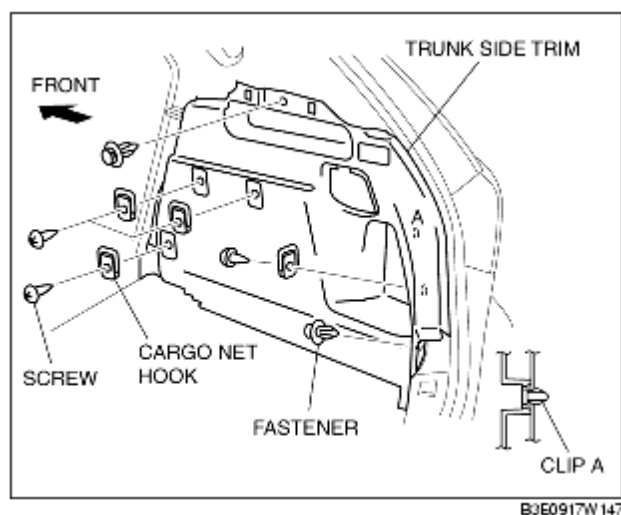

4. Remove the fasteners.
5. Detach the clip A and remove the trunk side trim.
6. Install in the reverse order of removal.