


TRUNK LID TRIM REMOVAL/INSTALLATION

B3E0917688W0W01

1. Remove the fasteners, then remove the trunk lid trim.

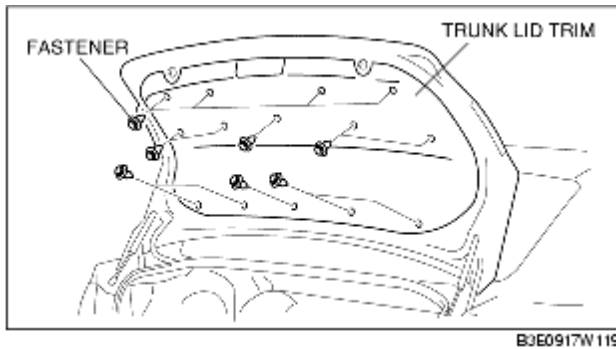

2. Install in the reverse order of removal.