
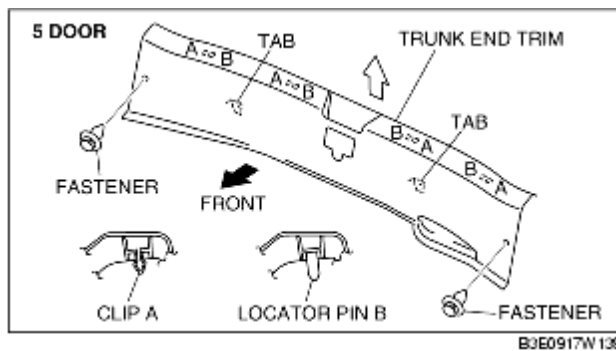


TRUNK END TRIM REMOVAL/INSTALLATION

B3E091768930W01

1. Remove the fasteners.

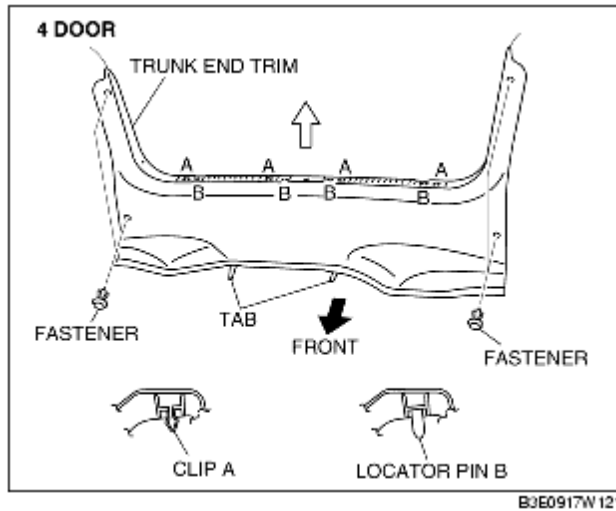

2. Pull the trunk end trim upward, then detach clips A, locator pins B and tabs.
3. Remove the trunk end trim.
4. Install in the reverse order of removal.